


# WENCO SIMPLEX WIRE STRIPPER MODEL S-15

SEE CHART NO. 7

CHART NO. 7

CHART NO. 5

CHART NO. 6

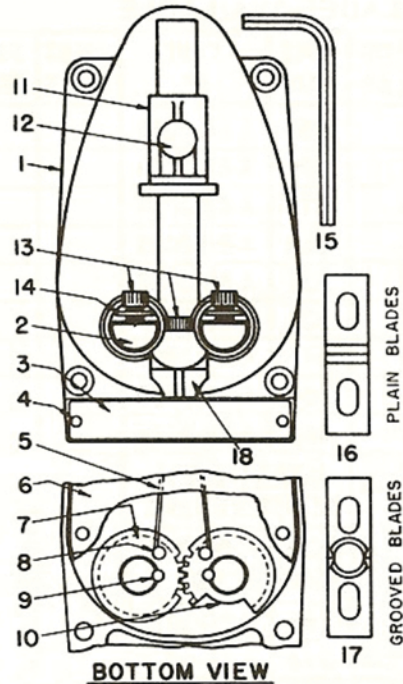

PARTS LIST

ITEM NO.	NO. REQD.	PART NO.	DESCRIPTION
1	1	C-2B-3295	Stripper Base Includes Items 1-10
2	2	A-5B-3296	Blade Holder
3	1	A-19A-3305	Name Plate
4	7	A-17A-2367	P.K. Drive Screws #0 X 3/16
5	1	A-7C-3239	Torsion Spring
6	1	A-4B-3302	Bottom Plate
7	1	A-5A-3297	Spur Gear - Plain
8	2	A-17A-2368	P.K. Drive Screws #0 X 1/4
9	2	A-5B-3299	Pin
10	1	A-5A-3298	Spur Gear - Milled
11	1	A-2C-3303	Adjustable Stop
12	1	A-35B-3304	Stop Screw
13	3	A-13B-2663	Knurled Screw #10-32 X 3/8
14	2	A-4E-3301	Washer
15	1	A-9A-3216	Allen Wrench 5/32 Hex
16	1 set	A-8A-2090	Blade (Plain)
17	1 set	See Chart	Blade (Grooved)

GROOVED BLADES AVAILABLE

WIRE GUIDES

HOLE SIZE	PART NO.	IDENT. MARK	FOR A.W.G. WIRE NO.	HOLE SIZE	PART NO.
.027	A-8A-2091	19	21 & 22	.063	B-2C-3307
.035	A-8A-2092	18	19 & 20	.078	B-2C-3308
.040	A-8A-2093	17	18	.094	B-2C-3309
.047	A-8A-2094	16	17	.109	B-2C-3310
.054	A-8A-2095		16	.125	B-2C-3311
.063	A-8A-2096	12	14 & 15	.141	B-2C-3312
.070	A-8A-2097		14	.156	B-2C-3313
.078	A-8A-2098	11	13	.172	B-2C-3314
.082	A-8A-2099	15	12	.188	B-2C-3315
.088	A-8A-2100		12	.203	B-2C-3316
.094	A-8A-2101	13	11	.219	B-2C-3317
.101	A-8A-2102	14	10	.234	B-2C-3318
.109	A-8A-2103	10	10	.250	B-2C-3319
.116	A-8A-2104		9	.266	B-2C-3320
.125	A-8A-2105	5	9	.281	B-2C-3321
.136	A-8A-2106		8	.297	B-2C-3322
.141	A-8A-2107	9	8	.313	B-2C-3323
.147	A-8A-2108		7	.328	B-2C-3324
.154	A-8A-2109	4	7	.344	B-2C-3325
.161	A-8A-2110		6	.359	B-2C-3326
.172	A-8A-2111	00	6	.375	B-2C-3327
.180	A-8A-2112		5		
.188	A-8A-2113	0	5		
.196	A-8A-2114		5		
.203	A-8A-2115	8	5		
.209	A-8A-2116		4		
.219	A-8A-2117	7	4		
.228	A-8A-2118		3		
.234	A-8A-2119	6	3		
.242	A-8A-2120		3		
.250	A-8A-2121	3	3		
.257	A-8A-2122		2		
.266	A-8A-2123	2	2		
.272	A-8A-2124		2		
.281	A-8A-2125	1	2		
.290	A-8A-2126		1		
.297	A-8A-2127		1		
.302	A-8A-2128		1		
.313	A-8A-2129		1		
.320	A-8A-2130				
.328	A-8A-2131		0		
.335	A-8A-2132		0		
.344	A-8A-2133		0		
.351	A-8A-2134		0		
.359	A-8A-2135		0		
.367	A-8A-2136		00		
.375	A-8A-2137		00		

## INSTRUCTIONS—S-15 WIRE STRIPPER

**INSTALLATION.** Mount stripper securely on bench.

**WIRE GUIDE INSTALLATION—**See Chart No. 6 for Available Sizes. Wire guide with plain shelf end is used with plain blades and bell mouthed end must be used with grooved blades. Select proper wire guide to clear outside diameter of wire.

**BLADE INSTALLATION.** After proper wire guide is installed select and mount proper blades to suit wire that is to be stripped, and lineup as follows.

**GROOVED BLADES—**See Chart No. 5 for Available Sizes. Clamp grooved blades in position so that straight cutting edges touch and grooves are concentric with wire guide hole.

**PLAIN BLADES.** Clamp central with wire guide and the proper distance apart to just clear the diameter of inner conductor being stripped. These blades can be used for parallel wire, heater cord and many single conductor wires.

**WIRE STOP.** Set wire stop for proper stripping length.

**OPERATION.** Insert the wire through the wire guide up to the stop and a quick pull on wire draws it through the oscillating stripping blades neatly removing the insulation.

**IMPORTANT—DO NOT LUBRICATE OR USE ANY TYPE OF SOLVENT FOR CLEANING BLADE HOLDER JOURNALS.**